

# OPERATION INSTRUCTION



## Installation Instructions

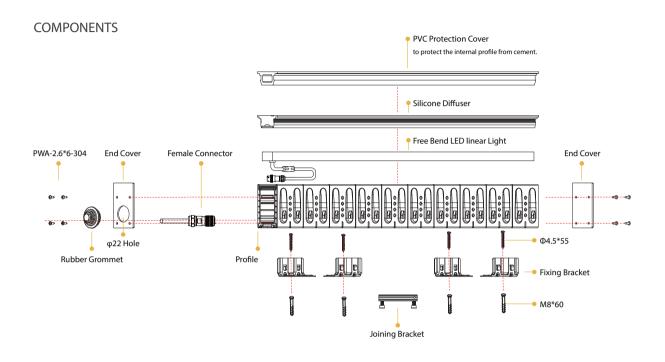

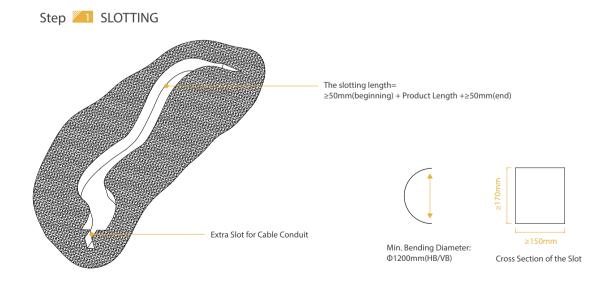







# Installation Instructions

## Step Z DRAINAGE LAYER CONSTRUCTION

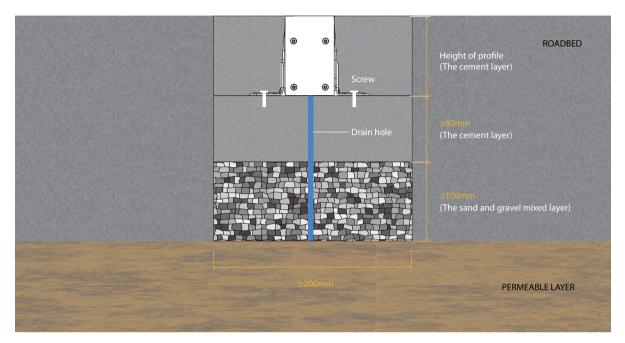


Cross Section of the Slot

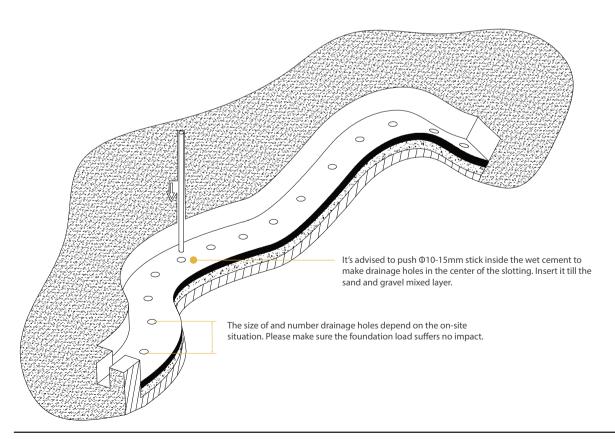





## Installation Instructions

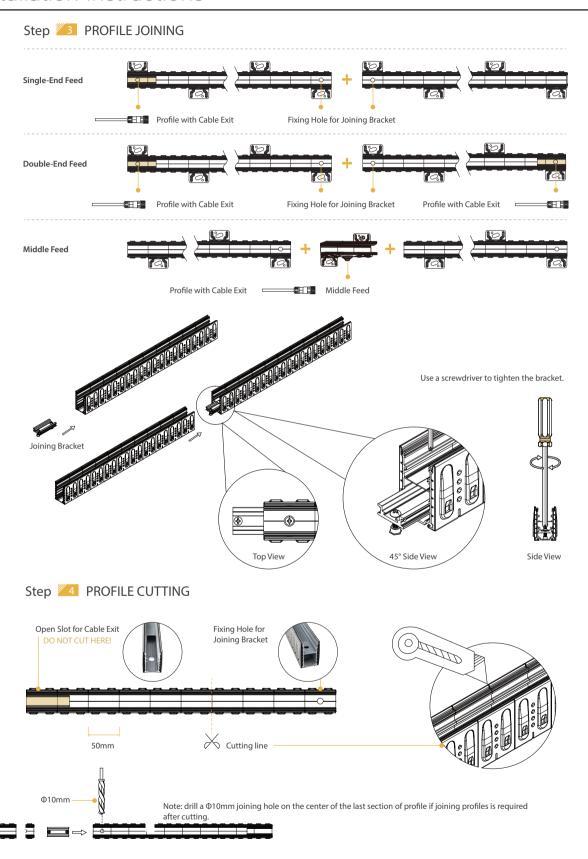





## Installation Instructions

## Step 5 INSTALLATION OF END COVER & CONNECTOR

Cut a hole in the rubber grommet that best fits the cable.

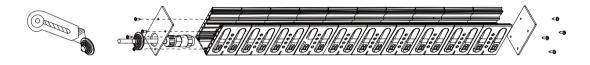



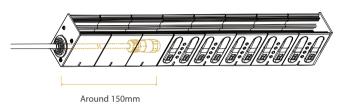

Cable Exit-End



Cable Exit-Bottom



Cable Exit-Side




Step 6 INSTALLATION OF FIXING BRACKET


Side View







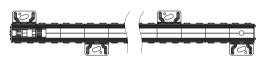

Recommend 6pcs fixing brackets per 1m and they should be spaced evenly on alternate sides

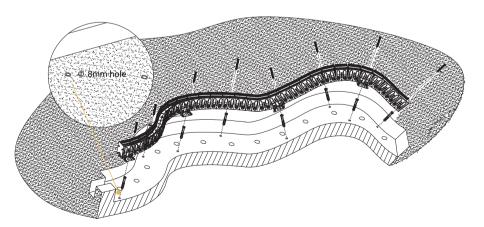

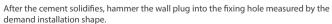

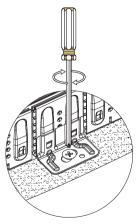

Then tighten the fixing brackets with screws.







## Installation Instructions

## Step INSTALLATION OF PVC PROTECTION COVER


Put the PVC protection cover in place to protect the profile from debris.

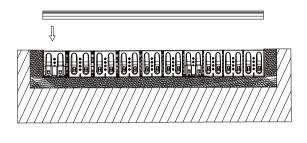

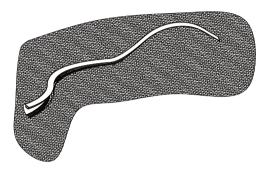


Step 8 INSTALLATION OF CABLE CONDUIT


Step 9 FILLING CEMENT

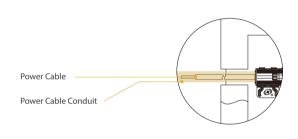

Sheathe the cable in the cable conduit completely to keep cement from hardening and jamming the cable.

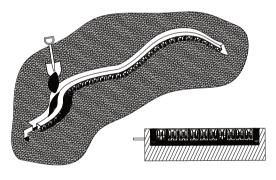


Refill the ground until it's level with the product surface.

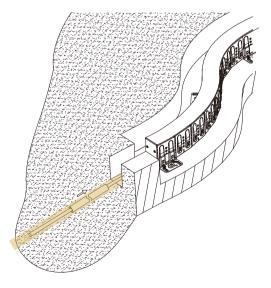

Step 10 REMOVING THE PVC PROTECTION COVER

Clean the slot after removing the cover.

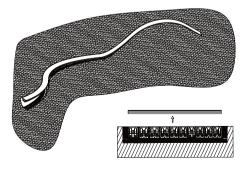




## Installation Instructions

## Step 11 INSTALLATION OF FREE BEND LIGHT

Note: energize and test the light is needed before the installation.

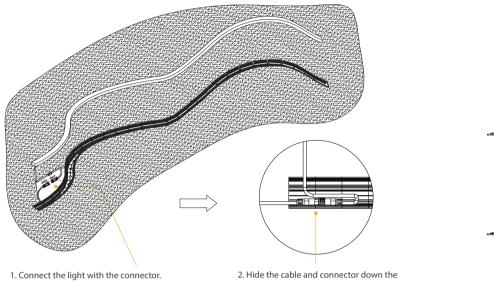


raceway.





Step 14 PLACING THE SILICONE DIFFUSER

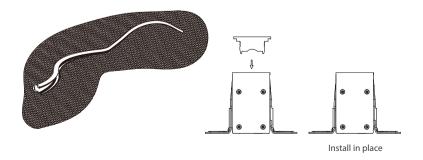

WWW.LEDCTRL.COM





# Maintenance & Replacement of InGround Lights

Regular maintenance, systematic troubleshooting, and the use of standarised replacement components ensure long-term reliability, safety, and optimal performance of inground lighting systems.

#### I. DAILY MAINTENANCE

Frequency:

Every 3-6 months (or immediately after extreme weather events such as earthquakes, heavy storms, floods, typhoons, or ice storms)

## 1.1 INSPECTION CHECKLIST

- Surface Debris
  - Remove dirt, mud, leaves, or other obstructions blocking light emission
- Light Performance
  - Check for flickering, dimming, or complete failure.
- Physical Damage
  - Inspect for cracks, deep scratches, or signs of impact on the silicone cover
- Junction Box Integrity
  - Verify waterproof connectors are intact with no aging or deterioration

#### 1.2 CLEANING TIPS



#### **Recommended Method**

Use a soft cloth with a neutral cleaner (avoid abrasive brushes or harsh chemicals).



## Alternative Method (High-Pressure Cleaning)

A water jet gun is recommended for a deep, intensive cleaning. Cleaning machines are also advisable, provided the inground light can withstand the weight.

Rinsing Pressure: 20-80bar (290-1160psi).

Nozzle: fan nozzles only (disperses pressure);

zero-degree nozzles may cause surface

damage.

Distance: 30-50cm. (can be 15cm for stubborn stains for

20-30 seconds max).

Water Temperature:  $\leq 40^{\circ}$ C (room temp or lukewarm).





# Maintenance & Replacement of InGround Lights

#### II. REPLACEMENT INSTRUCTIONS

## 2.1 REPLACEMENT CONDITIONS

- Silicone Cover Damage: Cracks, deep dents (>3mm), or permanent stains affecting light output.
- Light Failure: flickering, dimming, extinguishing, or dead LEDs or no illumination at all.

## 2.2 STEP-BY-STEP REPLACEMENT

## **Critical Reminders:**

NEVER stretch the silicone cover before cutting it. Avoid excessive force to prevent damage. Clean the channel before reinstalling the cover.

	A. Silicone Cover Replacement
1) Remove Old Cover	Use a screwdriver to pry open the cover from one end. Gently pull it out along the profile.
2) Align Length & Cut New Cover	
3) Install New Cover	Install the new silicone cover and ensure it fits evenly along the profile.

	B. Light Replacement
1) Power Off	Disconnect electricity completely.
2) Locate Faulty Light	Identify the exact position where the light needs replacement.
3) Remove Silicone Cover	Follow step 1) in Section A.
4) Extract Defective Light	Remove the failed light.
5) Pre-Install	Test the new light before installation.
6) Install New Light	Mathc polarity and ensure connectors are clean and dry.
7) Post-Install	Restore power and test the new light again.
8) Reinstall Silicone Cover	Carefully reposition the cover and ensure it fits evenly along the entire profile.

LED CTRL, 1/483 BALMAIN

LILYFIELD, NSW 2040, AUSTRALIA

