

FXN 1121|FLEXIBLE NEON
SIDE MOUNTING BRACKET


Friendly Reminder – Please read instructions carefully before operation

Step 1




Remove the PM3*6 screw of side mounting bracket.

Step 2

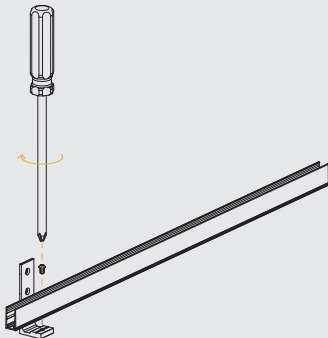


Fix side mounting bracket and mounting profile tightly by the screw.

Step 3

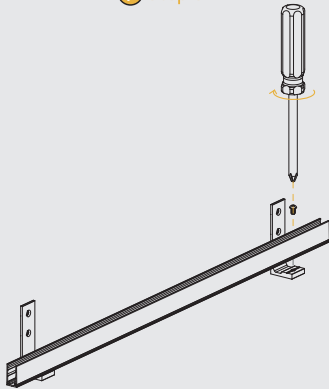


Repeat step 1 & step 2 for the remaining brackets and secure at least 2 locking points for each mounting profile, and the equal interval is more recommended.

Step 4

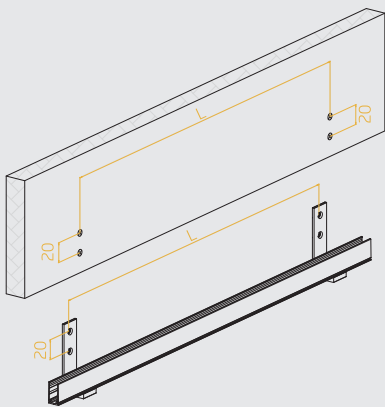

Mark the pilot holes on mounting surface accordingly.

Step 5

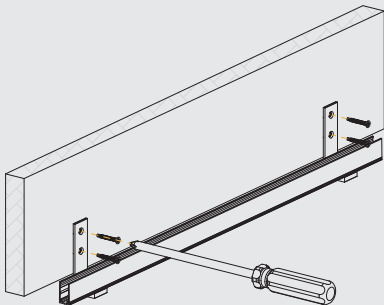

Fix the side mounting bracket by KA3.5*25 screws.