

FXN 1121 FLEXIBLE NEON

SLEEVE FRONT CONNECTOR

Please ignore these steps if the front connector has been assembled before delivery.

Note:

1. Never wet the assembly units or assemble with wet hands.
2. Please use the tools correctly.
3. Please pay attention to personal security when using tools.
4. Repeated assembly or reuse of the connector may result in waterproof failure.




1. Components of Front Connector

Note:

The light ends are marked with either an O1 or an O2. Always make sure to use an identically labeled connector for the appropriate direction.

2. Installation Steps

2.1 Placing PC Cover

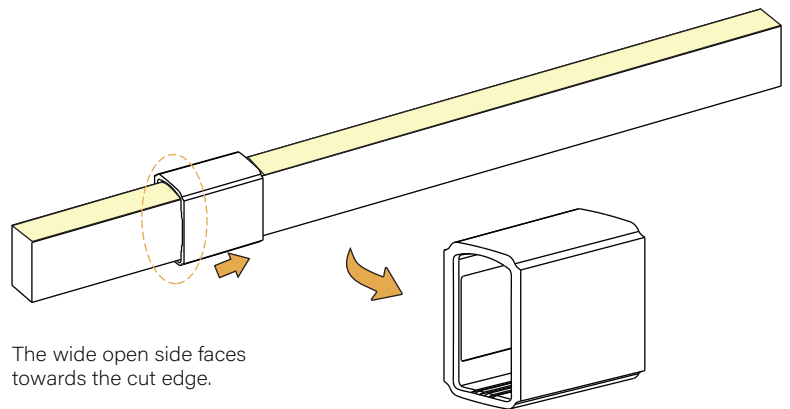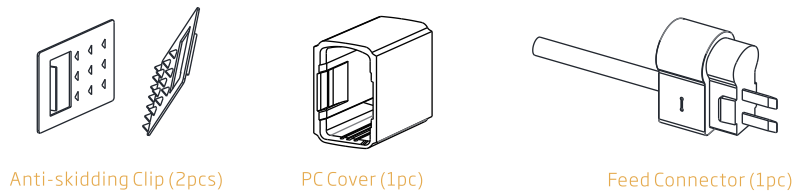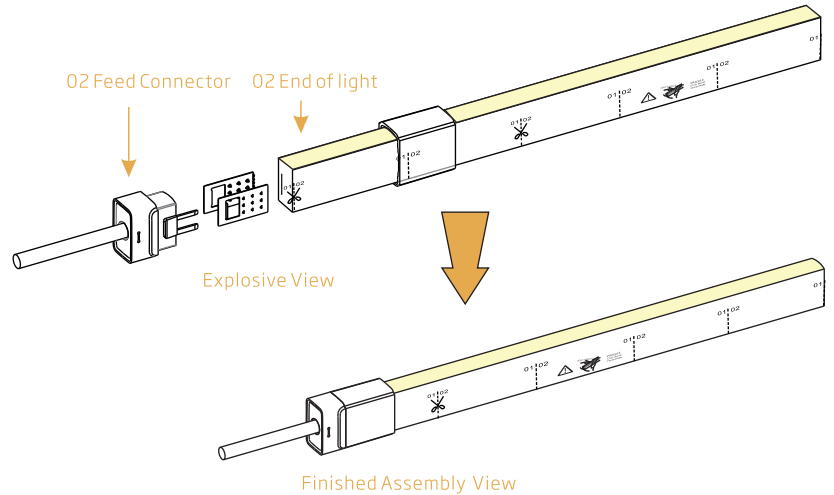


FXN 1121 FLEXIBLE NEON


SLEEVE FRONT CONNECTOR

3. Installation Steps


3.1 Inducing a Cavity for Feed Connector

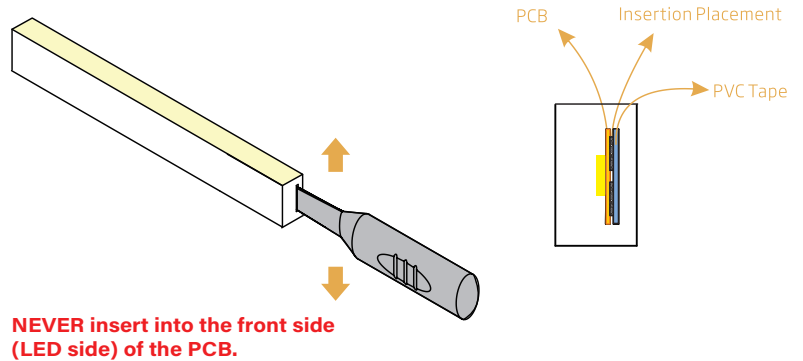

Insert the inducer to the backside of PCB around 10 ≈ 12mm, move the inducer up and down 3 ≈ 5 times gently to create a small cavity.

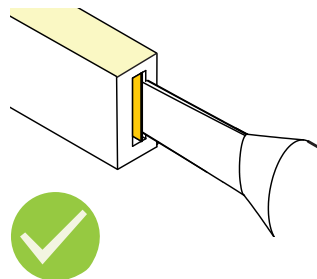


Insert the inducer into the backside of PCB

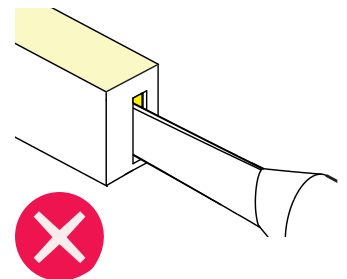


It will damage the light if insert into front side of PCB

Insert the feed connector pins into the cavity that you created with the Inducer (backside of PCB).

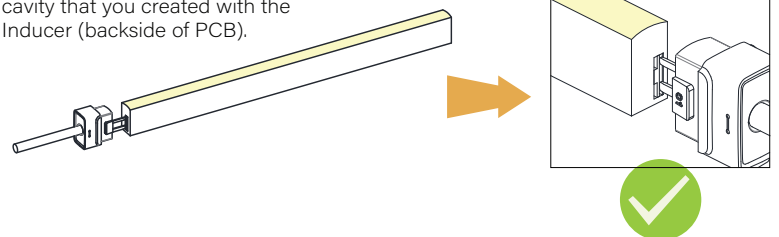


3.2 Insert the Feed Connector


Insert the inducer into the backside of PCB

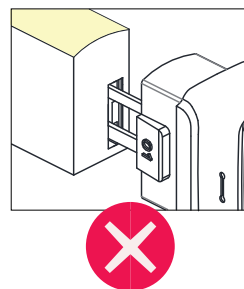

Insert into the front side of the PCB

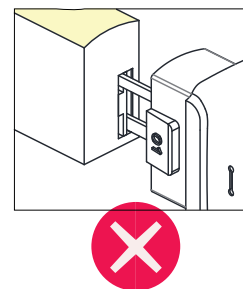

Insert crosswise into the PCB

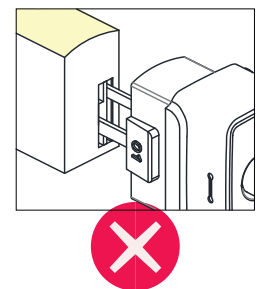


Insert crosswise into the PCB


FXN 1121 FLEXIBLE NEON

SLEEVE FRONT CONNECTOR



3.3 Installation of Anti-Skidding Clip

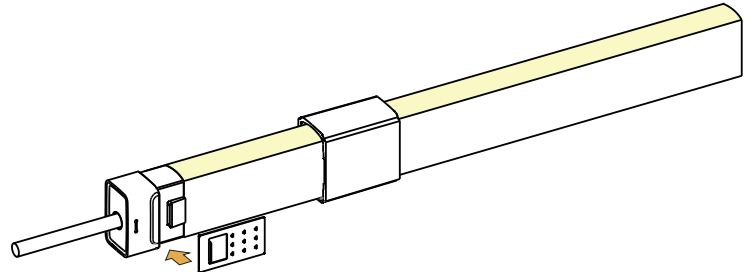

Place the anti-skidding clips to the lead connector with toothed side towards light.

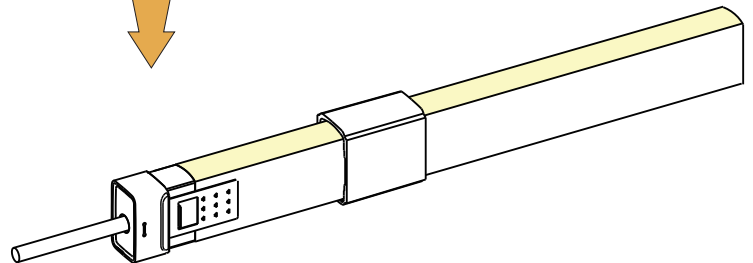

3.4 Slide back the PC Cover to cover the anti-skidding clip completely.

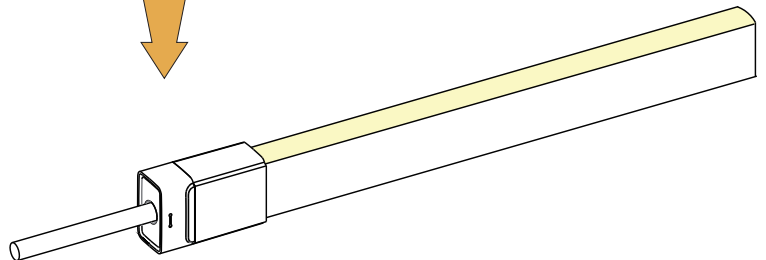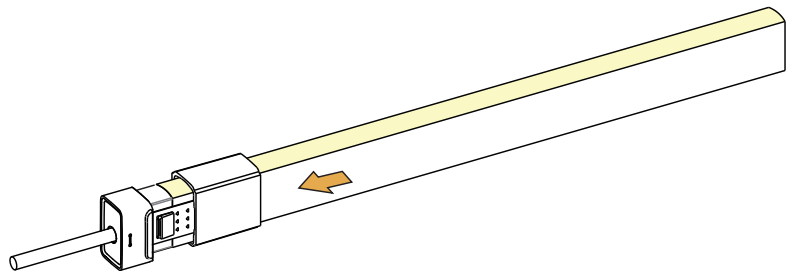

Please energize the light to check its functionality after connector assembly.

FXN 1121 FLEXIBLE NEON

SLEEVE END CAP

Please ignore these steps if the end cap has been assembled before delivery.

Note:

1. Never wet the assembly units or assemble with wet hands.
2. Please use the tools correctly.
3. Please pay attention to personal security when using tools.
4. Repeated assembly or reuse of the connector may result in waterproof failure.

1. Components of End Cap

Note:

The light ends are marked with either an 01 or an 02. Always make sure to use an identically labeled connector for the appropriate direction.

2. Installation Steps

2.1 Placing Shading Sheat

2.2 Insert the PC Cover

Please check its OK

