


FXN 156 | FLEXIBLE NEON


PIVOT MOUNTING BRACKET

Friendly Reminder – Please read instructions carefully before operation


Step 1



Step 2

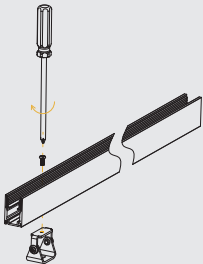

Step 3

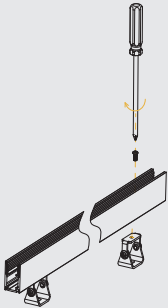

Step 1:



Remove the upper screw from pivot mounting bracket.



Step 2:

Fix pivot mounting bracket and mounting profile tightly by the screw.

Step 3:

Repeat step 1 & step 2 for the remaining brackets and secure at least 2 locking points for each mounting profile, and the equal interval is more recommended.





Warning:


Keep pivot mounting bracket and mounting profile parallel from the side view.

Step 4

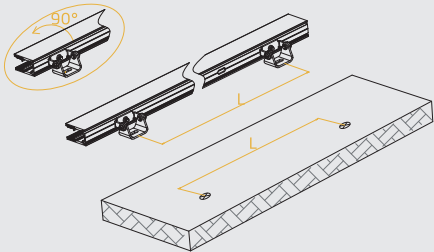


Rotate pivot mounting bracket till the showing up of the unfixed screw hole to facilitate the installation with mounting surface as per the pre-marked hole.

Step 5

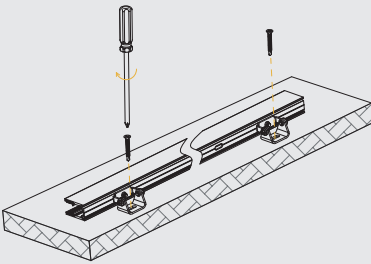


Fix pivot mounting bracket to mounting surface by KA3.5\*25 screw.

Step 6

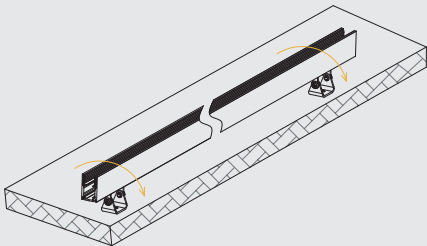

Adjust the angle of mounting profile to the one required.

Step 7

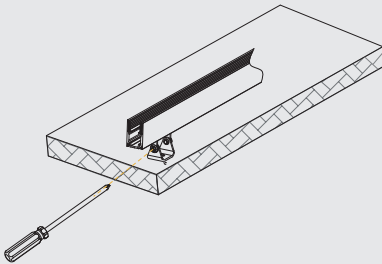

Tighten the side screws of pivot mounting bracket to avoid loosened locking point.