


FXN 156 | FLEXIBLE NEON  
SIDE MOUNTING BRACKET


Friendly Reminder – Please read instructions carefully before operation

➤ Step 1




Remove the PM3\*6 screw of side mounting bracket.

➤ Step 2

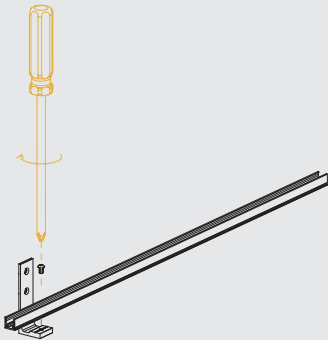


Fix side mounting bracket and mounting profile tightly by the screw.

➤ Step 3

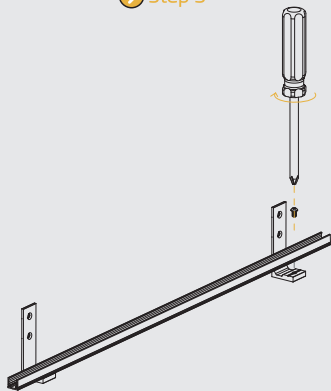


Repeat step 1 & step 2 for the remaining brackets and secure at least 2 locking points for each mounting profile, and the equal interval is more recommended.

➤ Step 4

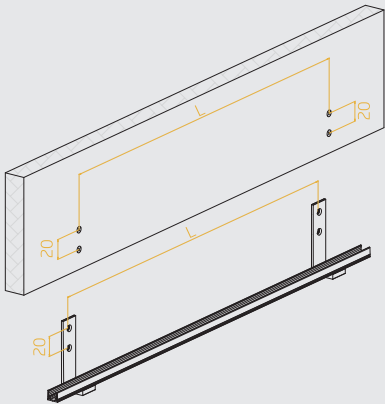

Mark the pilot holes on mounting surface accordingly.

➤ Step 5

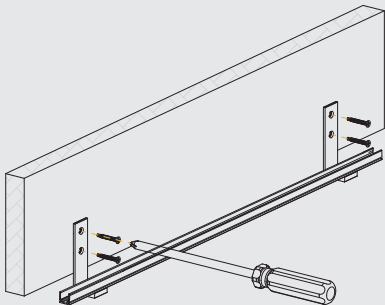

Fix the side mounting bracket by KA3.5\*25 screws.