


FXN 156 FLEXIBLE NEON
SUSPENSION KIT


Friendly Reminder – please read instructions carefully before operation.

Step 1

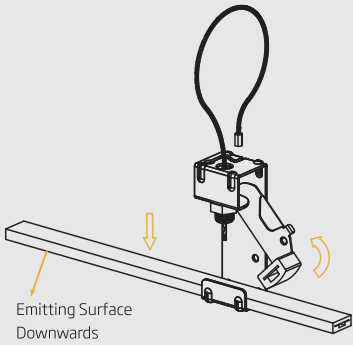


Rotate the safety lock outwards and put the LED strip in the J hook.

Step 2

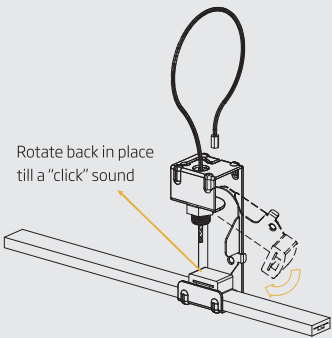


Rotate the safety lock back to press the led strip tightly.

Step 3

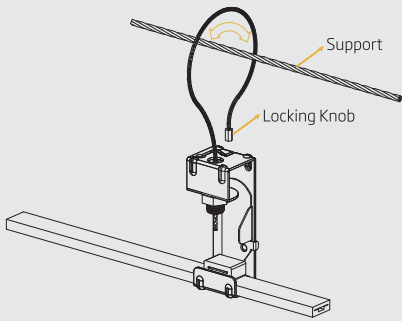


Wind the wire rope with the locking knob around the support.

Step 4

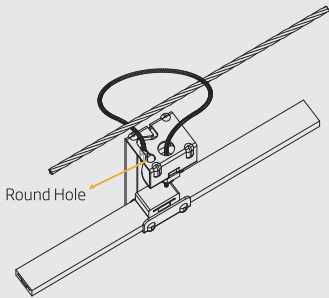


Thread the locking knob of wire rope through the round hole.

Step 5

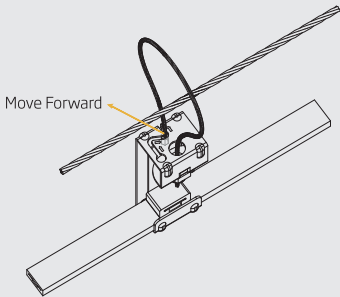


Move the wire rope forward to the end along with the arrows aside.

Step 6

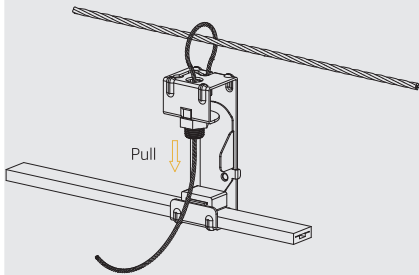


Pull the wire rope to adjust the height to the desired one.

Step 7

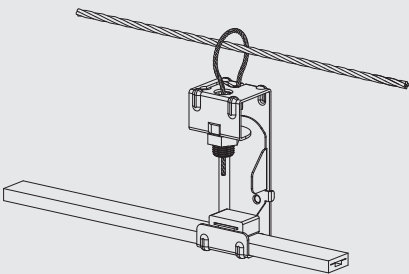

Cut or roll the excess wire rope.
NOTE: The recommended quantity is 3pcs for every meter or adjustable based on the specific case.

Tip

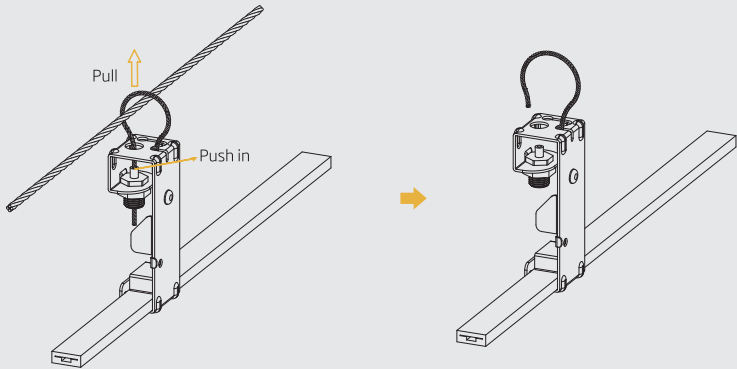

Push in the plunger of cable gripper to pull out the wire rope if needed.