


FXT 10 | PIXEL STRIP SERIES

Installation


Products and Tools




FXT 10

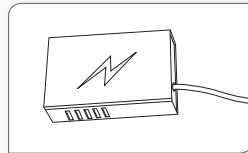


LED power supply

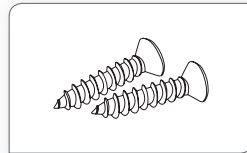


Self-tapping screw

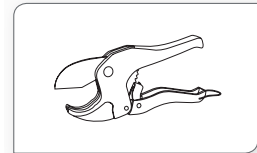

Cutting tool

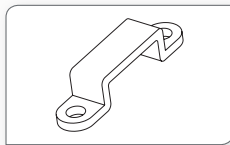




Clips

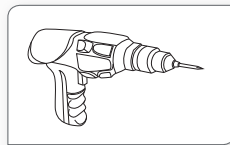

Electric drill






Installation Methods and Steps

Aluminum channel installation

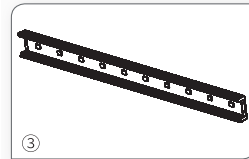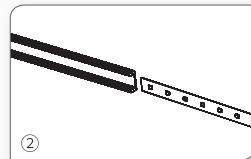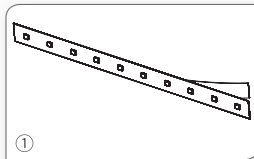

1. Peel away the self adhesive tape on the back of strip.
2. Cut off the excess part based on the installation position.
3. Evenly arrange the strips with appropriate space in the track.
4. Install the cover and end cap.

Covered channel installation

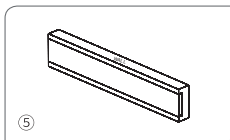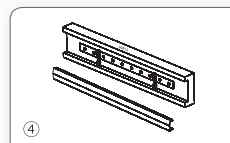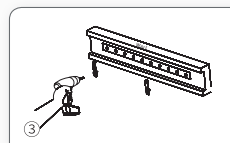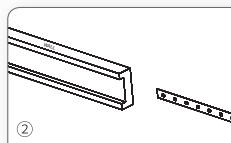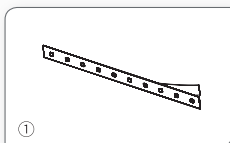

1. Peel away the self adhesive tape on the back of strip.
2. Cut off the excess part based on the installation position.
3. Evenly arrange the strips with appropriate space in the track and fix them with clips.
4. Install the cover and end cap.
5. Finished

FXT 10 | PIXEL STRIP SERIES

Installation

Attentions before Installation

Before installation, check that the product parameters are consistent with the requirements (Seeing product specifications or product labels).

Load voltage, current, power and power supply should be matched with the product.

Follow the instructions of wiring diagram (first connect the load and then the power supply) to avoid short circuit.

Make sure the correct connection of positive and negative poles between products and power supply. Otherwise, the light will not be on.

Make sure the power cord firmly screwed into the terminal and it should not be pulled out by hands.

The terminal should have insulation, waterproof and anti-corrosive treatment.

If the working length exceeded the max run length, make sure to have extra power supply.

If it needs higher current of a LED, make sure having extra cooling.

Common Faults and Troubleshoots

Quick Guide		
Problems	Reasons	Solutions
All LEDs can not light on.	No electric supply.	Power on
	Automatic power protection from the open or short circuit in output of the power supply.	Fix the short circuit problem.
	Wrong connection of power supply.	
LEDs can not light on partly.	Some switching mode power supplies are not powered.	Check the power supply system to fix it.
	Power supply line error.	
	Mistaken wire connection of some of products	Correctly connection
Brightness of LED is inconsistent or insufficient	Power overloaded.	Replace with more powerful power
	Power supply circuit excessive consumption.	Make sure the working voltage of the product within $\pm 5\%$ of standard voltage, or keep balance by circuit power consumption.
	Excessive quantities in series connection of the product	Reduce the quantities of the product in series connection to meet requirement.
LED flicker.	Connection point fault.	Remove bad connection point.
	Switching power supply failure.	Replace a new power supply.
	Wrong Installation or use of products	Please follow the instructions

Warning

- Do not disassemble or retrofit the light. Do not touch the surface of the light with a sharp object.
- Do not do live-line working during installation, especially for high voltage product.
- Do not use any organic chemical solvents.
- Use neutral glass adhesive to fix this product and it needs to be dried 4 hours in the open environment after operation.
- Treat the ends and the circuit connection points that are not connected to the main line with insulation, waterproof, and anti-corrosion in the installation.
- Use 18AWG (0.75mm² cross-sectional area) or thicker core wire to avoid adverse consequences caused by overheating, if the power cable need to lengthen.
- Make sure the input voltage meets the requirements and lines are connected correctly before lighting on.
- This product is for signage, and do not use as general lighting.
- Series connection within the max run.
- The length of the power cable between the power supply and the led strip should not exceed 2 meters. Otherwise, large circuit loss will lead to inconsistent brightness.
- Installation, maintenance and repair should be operated by a qualified technician.

Statements and Recycling

Statements:

Repair should be operated by a qualified technician, if the external circuit or main line of this product is damaged.

The parameters given in this manual are typical values and for reference only.

All illustrations and drawings in this manual are for reference.

This product is subject to change without notice.

Recycling:

LED lighting products belongs to electronic products, please do recycling treatment according to the relevant WEEE directives.